

INSTRUCTION MANUAL

SHADE TENT EASY-UP

4472190

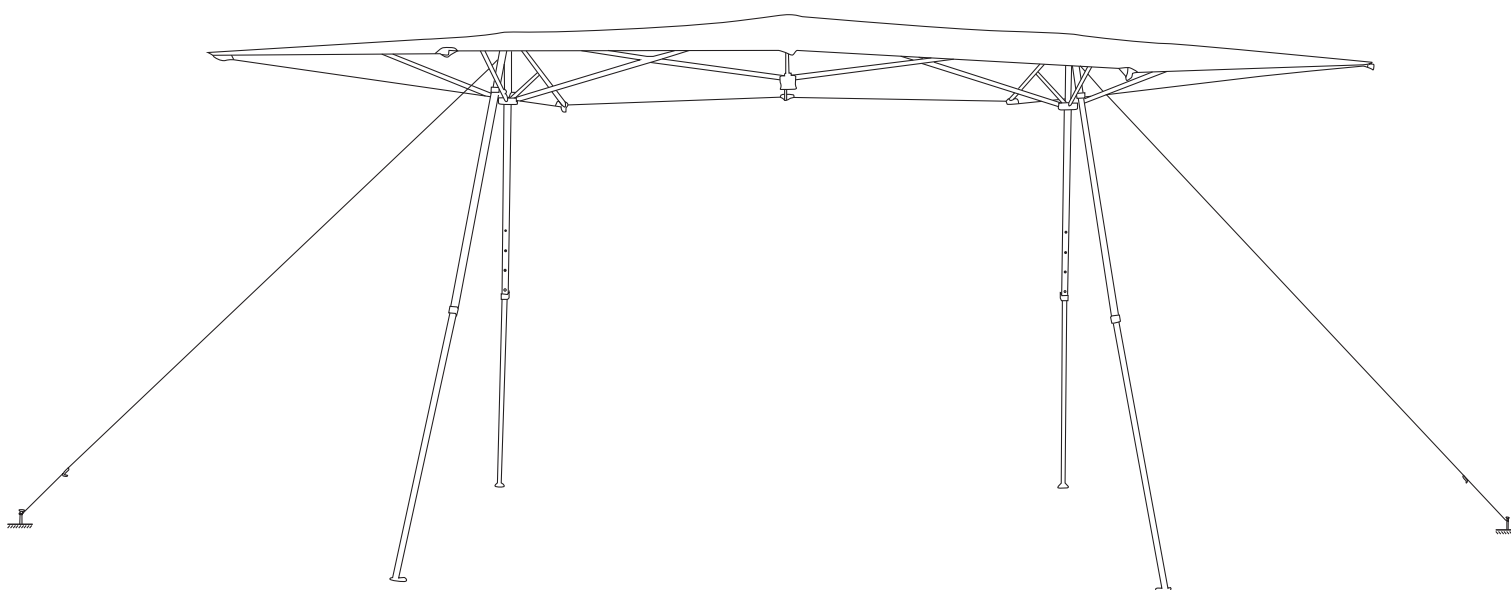 


Table of Contents

Warning Statement 3

Care and Maintenance 3

Set-up Instructions Step 1-3 4

Set-up Instructions Step 4-5 5


Set-up Instructions Step 5-6 6

Set-up Instructions Step 7 7

Set-up Instructions Step 8-9 8

 
Take-down Instructions Step 1-3 9







Take-down Instructions Step 4-5 10

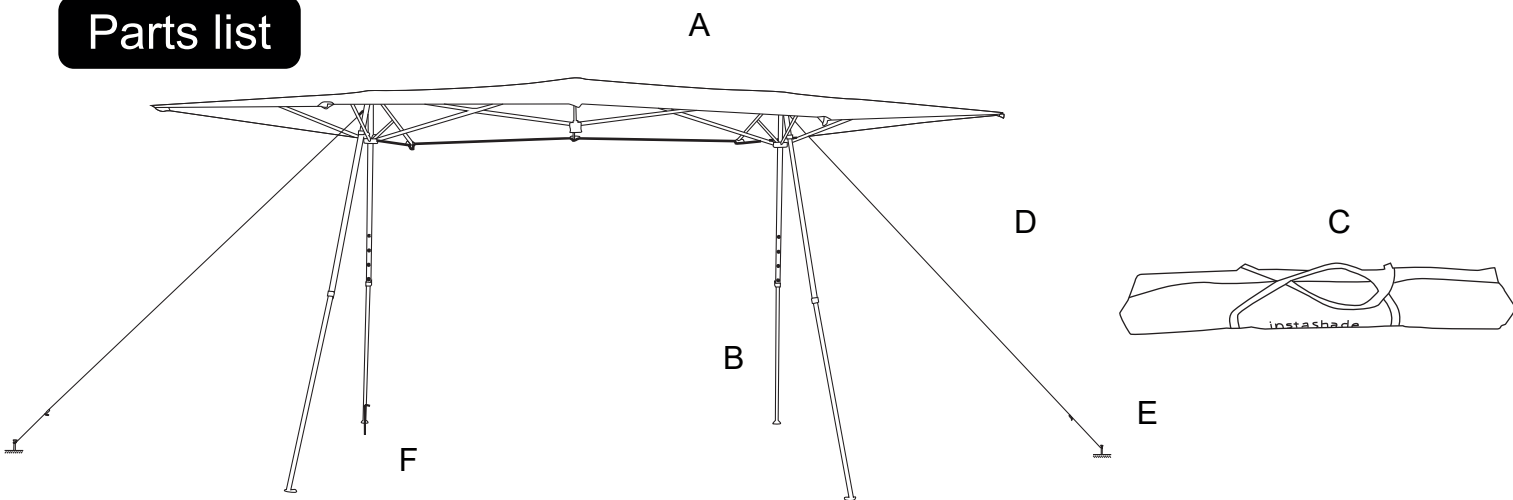 Reminders 10

Troubleshooting 11

Parts list



Part		Description	QTY
A		Canopy	1
B		Frame	1
C		Storage Bag	1
D		Guy Rope	2
E		Ground Stake	2
F		Foot Peg	4

WARNING:

It is user's responsibility to take all measures to secure this product once it is erected. We are not responsible for damage caused by wind, rain or other natural forces, nor for use of the product that is not in accordance with the product instructions, including failure to follow the safety and maintenance instructions. It is your responsibility to read and understand the instructions before attempting to set up your product.

- Always secure the shade with pegs and guy ropes. It's crucial to do this any time you have the shade up to minimize the impact of unexpected wind gust. Extra weight down at legs is highly recommended.
- This is a sun shade shelter. Do not use in extreme weather conditions. Do not use in lightning storms. Do not use in very windy weather. Take down the shade before extreme weather events.
- **Be cautious when handling the frame. Avoid pinching hands or fingers in any moving parts as frame opens and closes.**
- The shade is designed for temporary use, not a permanent structure. Do not leave up for extended periods and do not leave the shade unattended. Take down the shade and store away after each use.
- **Caution: Watch out during opening up! The expanding frame may hurt others. Warn others and keep children away from the set up area.**
- Avoid twisting the frame during set up. Raise legs evenly. The frame tubes may break if you twist the frame too much.
- **KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.** It is not fire proof. The fabric will burn if left in continuous contact with any flame source.


CARE AND MAINTENANCE

- Wash frame and canopy with a mild solution of soap and water, rinse thoroughly. Dry completely. Do not use bleach or solvents.
- Inspect frame periodically to ensure all bolts and nuts are tight.
- Always return the shade to storage bag after use. Suggest to take the canopy off the frame for separate storage in the bag. Be sure the canopy is completely dry before storing it.
- To prolong the use life, always close down the shade after each use. Long time exposure to weather will accelerate the aging of fabric canopy. shade after each use.




FIRST TIME SETUP WITHOUT CANOPY ON

1. Take out the frame and canopy top from the carry bag.


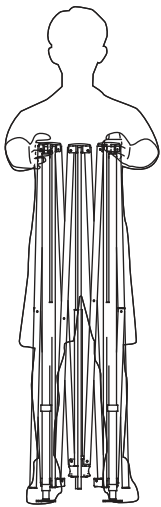


2. Hold the tops. Make sure you grab the tops firmly before the frame extended and the legs opened for free standing. **Please note do not let frame stand on its own before legs opened up. Otherwise the frame may fall and cause damage.**

Tips: If you have difficulty opening the frame, do not force it open as this may damage the frame. Please check the roof ribs that may be stuck in the frame when closed, simply pull them out.

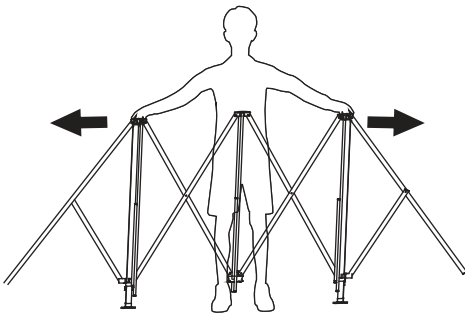

3. Extend the frame as much as you can. Let the legs open and stand on the ground.

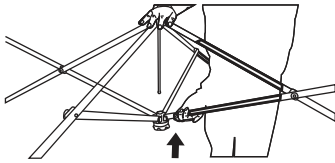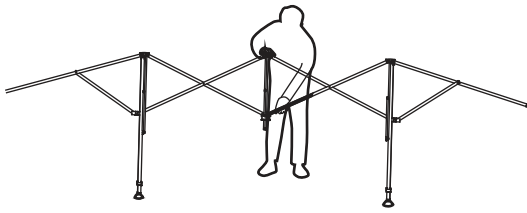


4. One hand lift the lower hub tube with the other hand push down top center hub to squeeze the trusses. The frame then further extended out.

Open the frame to the most till the central locking pin getting close to the bottom hub.

Do not lock the frame yet, wait till the fabric canopy top attached.



Tips: Make sure frame are lifted off ground. During the process, you may shake the frame a little bit to allow the connectors on leg posts slides and facilitate the opening.

Note: Make sure you watch out and warn others to avoid hurting others by sudden extending of the tubes.

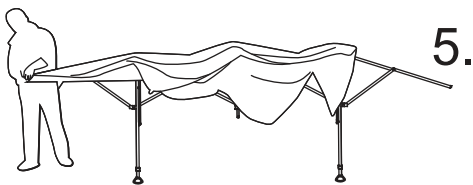


5. Put the canopy over the top frame and carefully pull over the corner pocket to the roof tube. Please pull the fabric gently.

Forceful pulling may tear the fabric.

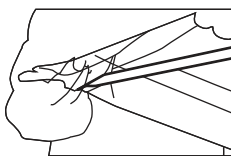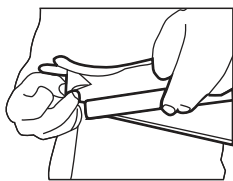


Tips: Suggested canopy attachment sequence: Pull the canopy corner pockets over the six parallel side rib tubes first, and then over the last two far end tubes.




SET UP WITH CANOPY ON

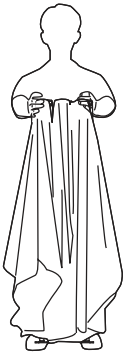

Extend the frame with assembled canopy as much as you can.
Pull the frame from one side and have one leg post at the other side as pivot point, walk backwards. Do it alternately on each side until the frame opens to its maximum.

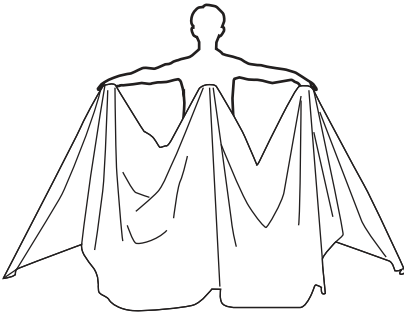


Tips: the best will be two persons to extend the frame to the upmost. Each person grab one side and pull and walk backwards.

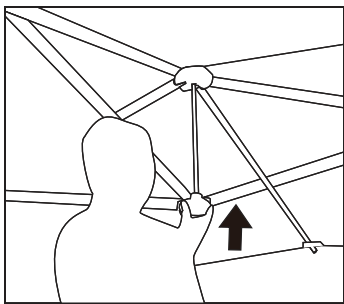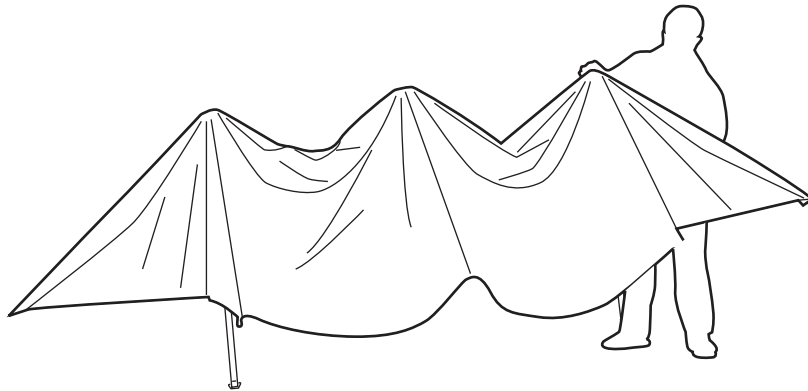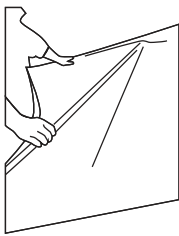


6. Get under the canopy and squeeze the top hub and bottom hub until the central locking pin click into the hub.


Tips: Again make sure frame are lifted off ground. During the process, you may shake the frame a little bit to allow the connectors on leg posts slides and facilitate the opening.

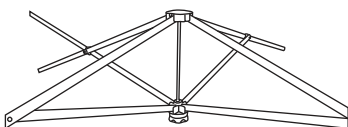

7. Hold the two leg posts with two hands and lift the frame. Keep the frame steady.

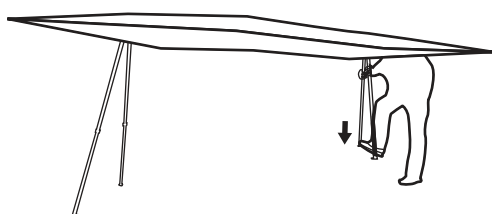

Step on the foot pads to extend leg posts slowly and alternatively until leg posts fully raised. Repeat on the other side. Two persons raise the leg posts simultaneously will be better and easier.

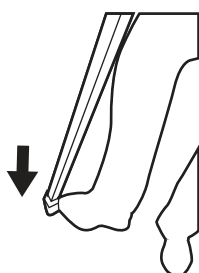


Tips: Keep the roof frame steady to avoid twisting trusses during the process. Severe twisting the frame may cause break.





Note: When the leg is fully raised, please check and open the legs completely for the best standing stability.


Make sure the sliders go all the way up to the stoppers.

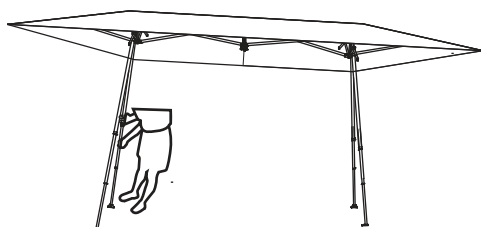


Height adjustment and tilting

- There are multiple height positions, lower shade position will help to withstand the wind. You may tilt the canopy to the sides for better shade too.
- Press the spring button on the leg extension (please do not overpress), extend out or shorten the legs to the desired height. Please be sure to keep each side at the same level when adjusting to avoid twisting the frame.

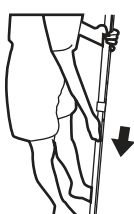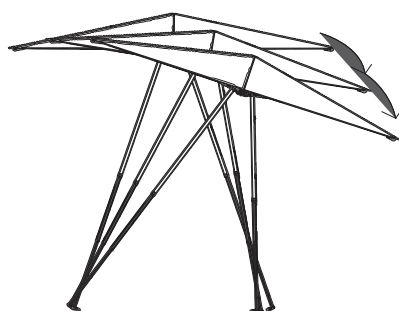


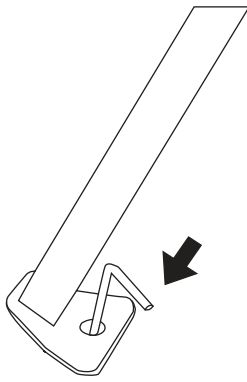

8. Peg down the legs: drive the 4 small pegs to keep the legs from moving sideways in mild weather conditions.

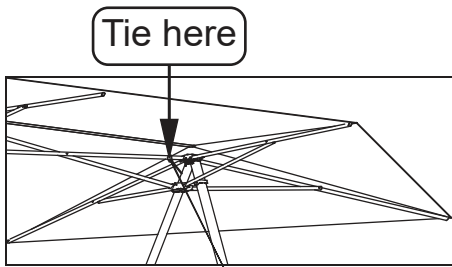


9. Two guy ropes and ground stakes provided. Tie one end of the guy ropes to the top truss tubes close to side top hub and the other end to the ground stakes. Have guy ropes reach out from two side tops for the best stability. Make sure that guy ropes have proper tension.

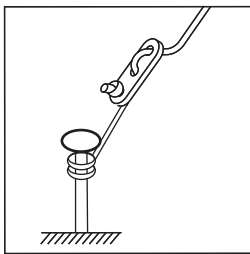


Please note this shade structure must be secured with guy ropes, pegs and ground stakes all the time once it's up. Highly recommend to take any extra measures to further secure the frame with weight bags and extra ropes.

A gust of wind may blow the shelter over if it's not appropriately secured.

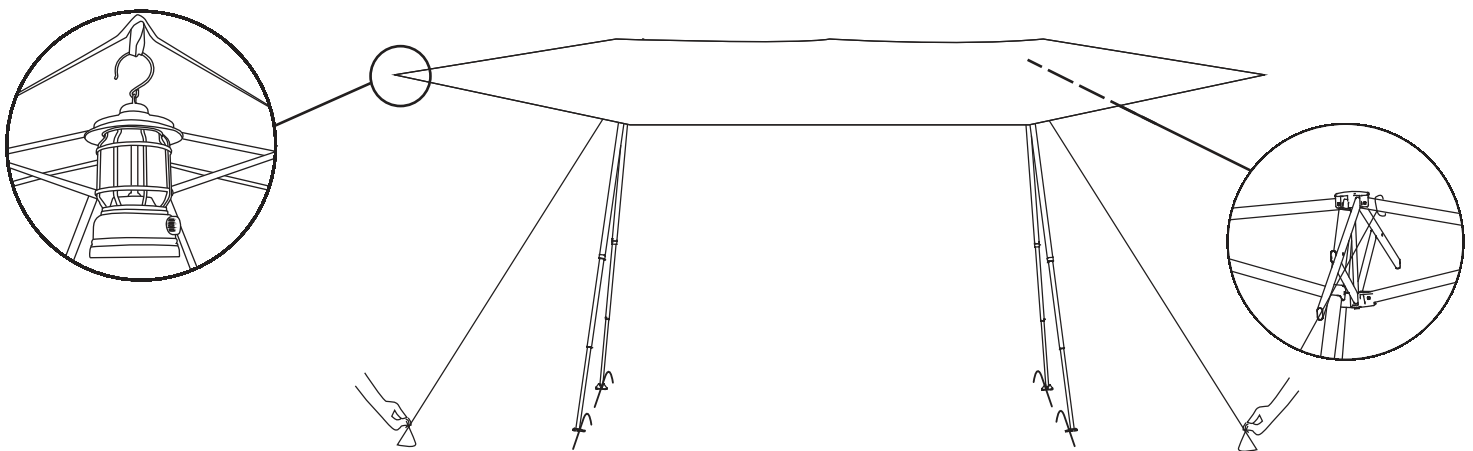


Note: The webbing hanging points are designed for decorative items such as camping lanterns (not included). Do not hang heavy items.


TAKEDOWN

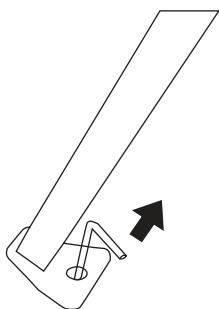

1. Remove pegs, guy ropes.


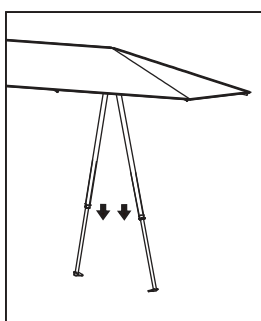


2. Press the spring button on the leg extensions and shorten the legs completely. **Please make sure you shorten the pair of leg posts at same time each time to avoid twisting the frame.**



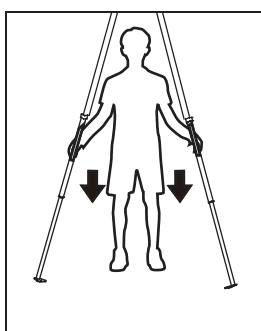


Note: If it is a three stage telescopic leg, please shorten the lowest stage first.

Note: Do not over press the spring button. Avoid pushing the spring button all the way into the tube and away from the pin hole. This will cause the spring button to become unable to pop out.

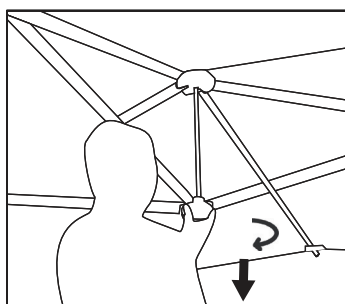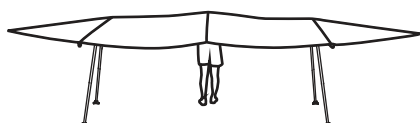

3. Go under your shade, grasp the central hub and turn counterclockwise to unlock the pin, then pull downward slowly.

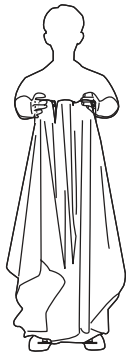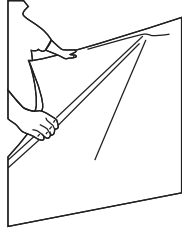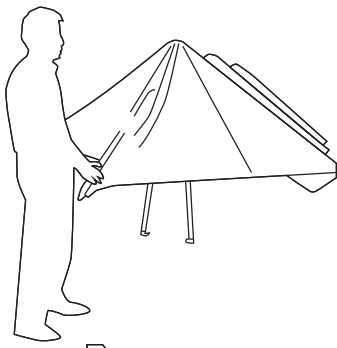

4. Grab the roof tubes on one end side of the canopy and lift the frame up slightly off the ground. With one leg post at the other side as the pivot point, push the frame towards it to close the shade.

Tips : You may shake the frame to facilitate the sliding and closing.

Repeat from each side until it fully closed. In case you need to remove the fabric canopy top, please do it before fully closing. Detach the canopy corners first from the two far end roof tubes and then from the six parallel side rib tubes.



5. Put the compressed frame into the carry bag. Make sure everything is completely dry before storing away.

REMINDERS

- The shade must be secured to the ground with anchors and guy ropes.
- One person set up allowed but cautions to be taken to avoid injury or damage.
- Do not use in extreme weather, take down in windy or rainy situation.

Troubleshooting

Problem / Question	Possible Cause	Prevention /Solution
The closed frame cannot be opened.	Roof ribs may be jammed in frame.	Pull out the ribs a little before opening the frame.
Blown away by a sudden gust of wind.	Not properly anchored or weighted; Very windy weather.	Always take measures to secure the shade frame. Use guy ropes, anchors or weight/sand bags; Close the shade on very windy days.
Wobble frame and slide around.	Legs are not fully open and anchored.	Be sure to open the legs fully for best stability, then use the foot pegs to hold the open legs in place.
Not easy to extend the frame alone during setup.	Sliders on legs do not move smoothly or frame is twisted.	Let the other person help you set up, or you can shake the frame a little while you push up on the center hub to help move the sliders on the legs, making sure the legs are off the ground with no obstructions.
Frame tube break during setup.	Twisting or forcing the frame too much.	Follow the instruction manual for setting up or closing. Make sure raise the frame evenly and avoid twisting.
Fabric loose and sagging, color fading, coating peeling, tearing over time.	Fabric aging, natural weathering.	Normal phonomon. Remove after each use to reduce exposure and prolong life. Replace the fabric top.

